

Installation Instructions

1. **Disconnect Battery.** **Do not skip this step.** Also, do not try to “test” the LED array by connecting the leads directly to your battery. Permanent damage will occur to the LED array if you fail to heed these steps.
2. Remove the lens from the taillight housing.
3. Remove the taillight housing from the truck.
4. Remove the bulb socket from the back of the taillight.
5. Take advantage of this time and clean or replace your taillight lenses. A clean, un-cracked lens will magnify your new LED lights.
6. Pass the supplied harness wires through the old bulb hole (see photo)
7. Cut the wires going to the tail /stop light bulb socket as near to the socket as possible.
8. **Driver’s side.** Using the supplied connectors, connect the taillight wire on your truck to the black wire on the supplied harness. To use the connector: Strip both wires and see the instructions on the next page. Repeat by connecting the brake light wire on your truck to the red wire on the supplied harness.
9. **Passenger side.** Repeat connections on the passenger side.
10. Reinstall taillight lenses/housings in your car.
11. Reconnect the battery.
12. Test both STOP and taillight functions.
13. Enjoy!
14. **Turnsignals:** If both the tail and stop function both work after installation, but the turnsignals do not, replace the turnsignal flasher with a new one of the same number. **Do not use a “heavy duty” flasher.**


Technostalgia

1889 E Telegraph Hill Rd

Madison Indiana 47250

812-265-0062

e-mail: info@cool-leds.com

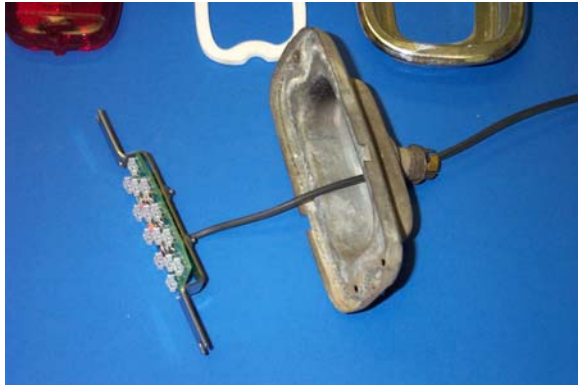


Pass the LED harness through the old bulb hole.



...and finally the lens. Install the lens screws and tighten. **Don't over tighten!!**





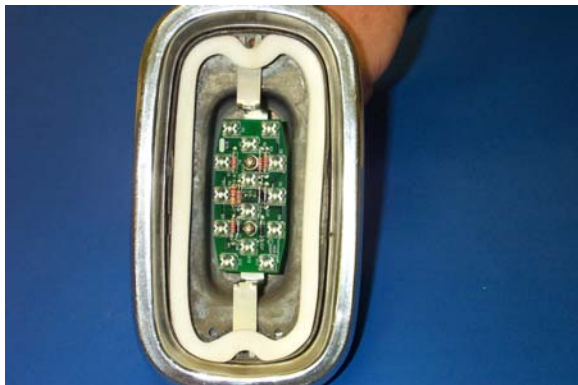

The slots in the end of the supplied stainless steel bracket aligns with the truck's lens screws.



The gasket goes next...

QUICK & EASY!

- ① Strip wire 1/2" 
- ② Twist 
- ③ Insert 
- ④ Hand tighten 



Parts included with the Technostalgia #6031 LED tail / stop lamp conversion kit for '60-'66 Chevrolet / GMC fleetside pickups..

Technostalgia

1889 E Telegraph Hill Rd

Madison Indiana 47250

812-265-0062

e-mail: info@cool-leds.com