





Installation Instructions

1. **Disconnect Battery.** **Do not skip this step.** Also, do not try to “test” the LED array by connecting the leads directly to your battery. Permanent damage will occur to the LED array if you fail to heed these steps.
2. Remove the lens from the taillight housing.
3. Remove the taillight housing from the truck.
4. Remove the bulb socket from the back of the taillight.
5. Take advantage of this time and clean or replace your taillight lenses. A clean, un-cracked lens will magnify your new LED lights.
6. Pass the supplied harness wires through the supplied plastic grommet and old bulb hole (see photo)
7. Cut the wires going to the tail /stop light bulb socket as near to the socket as possible.
8. **Driver’s side Electrical.** Using the supplied connectors, connect the taillight wire on your truck to the black wire on the supplied harness. To use the connector: Strip both wires and see the instructions this page. Repeat by connecting the brake light wire on your truck to the red wire on the supplied harness. Attach the supplied green wire to the central stud
9. **Passenger side.** Repeat connections on the passenger side.
10. Reinstall taillight lenses/housings in your car.
11. Reconnect the battery.
12. Test both STOP and taillight functions.
13. Enjoy!
14. **Turnsignals:** If both the tail and stop function both work after installation, but the turnsignals do not, replace the turnsignal flasher with a new one of the same number. **Do not use a “heavy duty” flasher.**

QUICK & EASY!

- ① **Strip wire 1/2"** 
- ② **Twist** 
- ③ **Insert** 
- ④ **Hand tighten** 

Technostalgia

2910 Clifty Drive

Madison Indiana 47250

812-265-0062

e-mail: info@cool-leds.com




Pass the supplied harness and LED array through the old bulb hole. Secure with the supplied grommet/washer and nylon insert nut. The supplied, green, ground wire gets attached to the central stud from the LED array.



Be sure that the LED array is square in the housing.



Re-install the LED array and housing back into the truck.

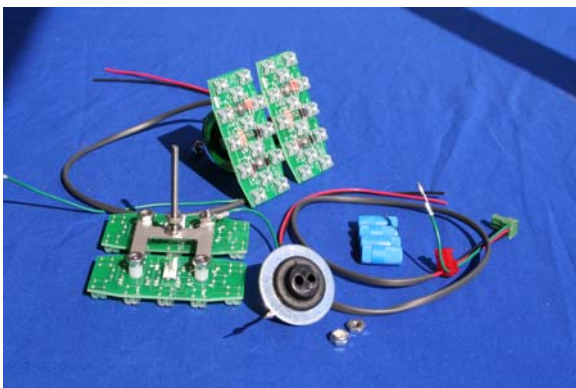

Parts included in the Technostalgia kit.